

Challenging surface activation applications met by the PiezoBrush PZ2

The [Relyon Plasma PiezoBrush® PZ2](#) has nozzle attachment options for **surface activation** across a wide range of applications. Treatment of metals, and smaller and more precise applications are now possible. The use of a variety of special gases enhance the possibilities of PDD (Piezoelectric Direct Discharge) on challenging substrates. Based on the direct, electric discharge at an openly operated piezoelectric transformer, low input voltage is transformed, resulting in high electric field strengths. The [PiezoBrush PZ2's](#) ionised energy output of cold active plasma gives pre-treatment and surface activation, enhancing wetting and adhesion.

Challenging surface activation applications met by the PiezoBrush PZ2



The PiezoBrush PZ2 shown with its three

nozzles – Standard, Nearfield and Multigas & Needle

Activation of Metals

When used on conductive surfaces, direct plasma discharges can damage some substrates or even the plasma device itself. The [**PiezoBrush PZ2 Nearfield Nozzle**](#) helps resolve this. Inside the **PZ2 Nearfield Nozzle**, a glass inlet forms a dielectric barrier and changes the type of discharge, distributing the power from the direct discharge uniformly over the treatment area, therefore eliminating the ability to damage the surface. This allows metals and other conductive substrates to be treated.

Challenging surface activation applications met by the PiezoBrush PZ2



Surface activation using the **PZ2 Nearfield Nozzle** can allow printing on materials which at normal conditions form poor bonds with inks. The example shown below is a printed anodised aluminium and polyethylene composite material (Alu-Dibond®). The cross-cut test illustrated on the patterns show that, although the ink was barely cured, there is a clearly recognisable adhesion improvement. A short treatment by the [PiezoBrush PZ2](#) on the right gave distinctly better results for the ink bonding.

Challenging surface activation applications met by the PiezoBrush PZ2



Before surface treatment




After surface treatment

Activation for Medical Device Technology

The **PZ2 Multigas and Needle Nozzle** can be used without a special gas (using ambient air) for a very precise surface activation treatment. The narrow output of plasma energy can be used for the treatment of very fine structures including undercuts or small holes.


Challenging surface activation applications met by the PiezoBrush PZ2

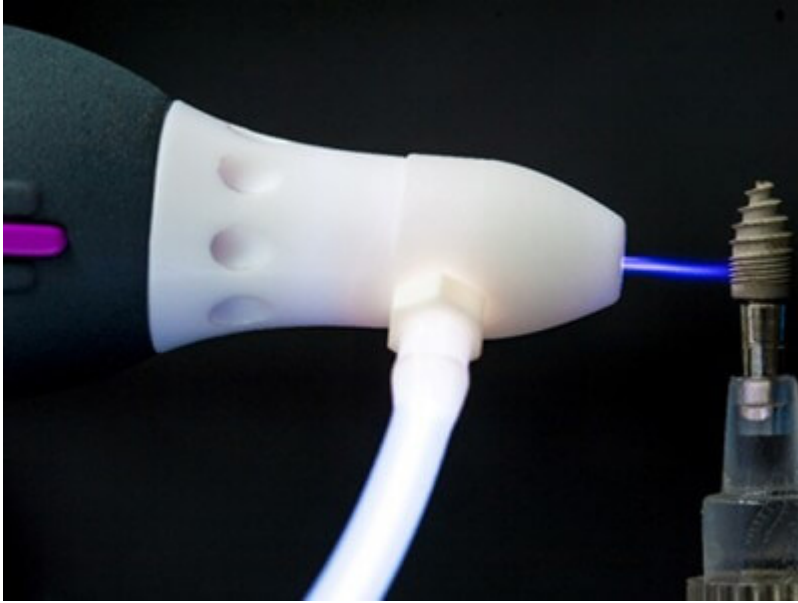

Alternatively, the **PZ2 Multigas and Needle Nozzle** can be used with an input of selected inert gases, which allows processes to be implemented which were previously impossible with normal gases such as air or nitrogen.

To treat Teflon (PTFE), a plasma gas with a special composition is used. An example application is these small PTFE inner coated catheters which are successfully treated to allow improved wetting. The picture shows the different degree of wetting of the catheter on the basis of capillary forces. An improvement of over 300% can be achieved.

Challenging surface activation applications met by the PiezoBrush PZ2

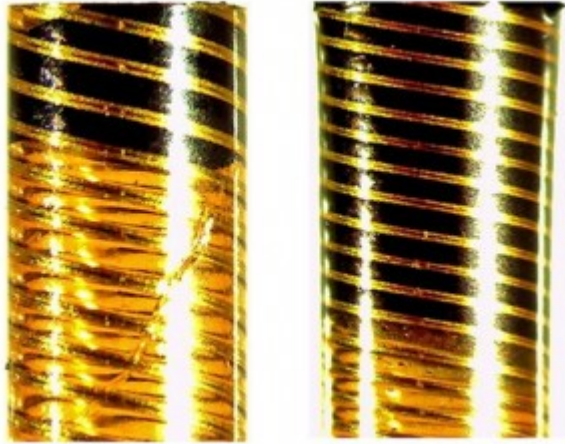

Note: The magnification of the two pictures is different; the number of diagonals can be used as a reference

Supplied by:

intertronics

INTERTRONICS

12a Station Field Industrial Estate, Banbury Road, Kidlington

Oxfordshire England OX5 1JD

t 01865 842842 e info@intertronics.co.uk

Last updated: January 2024

Statements, technical information and recommendations contained herein are based on tests we believe to be reliable but they are not to be construed in any manner as warranties expressed or implied. The user shall determine the suitability of the product for his intended use and the user assumes all risk and liability whatsoever in connection therewith.