

Micro-Dot Manual Positive Displacement Syringe Dispenser



Description

The **Micro-Dot™ hand-held syringe dispenser** delivers accurate and consistent fluid deposits from pre-packed 3, 5, and 10 ml disposable syringes. This portable syringe dispenser can be set to dispense a wide range of fluid shot volumes. Once a volume is set, the positive displacement design allows it to be repeated indefinitely with acute consistency. The Micro-Dot manual syringe dispenser is light weight and can be used in any environment. With the thumb actuated and lever actuated designs, users can choose the best actuation option for their users and application. [Smooth flow tapered dispensing tips](#) are recommended for achieving the most accurate shot size.

The Micro-Dot Manual Syringe Dispenser combines the efficiency of disposable syringes with a precise, repeatable, reusable, manually-activated delivery device.



Micro-Dot Manual Positive Displacement Syringe Dispenser



Thumb Activated Micro-Dot Syringe Dispenser



Lever Activated Micro-Dot Syringe Dispenser

Features & Benefits

- Control over dispense volume, assuring an accurate dispense despite viscosity and syringe level changes
- Positive-displacement dispensing with adjustable stroke
- Dispenses a wide range of low-to-high viscosity materials
- Portable; can be used anytime, anywhere
- No power or air required
- Easy product change over – eliminates the risk of material contamination during dispense
- Uses disposable syringe as fluid reservoir


Micro-Dot Manual Positive Displacement Syringe Dispenser



- Uses 3ml, 5ml or 10ml [disposable dispensing syringe barrels](#)
- Choice of thumb or lever actuation
- Compact and lightweight

Specifications

MICRO-DOT™ DISPENSER

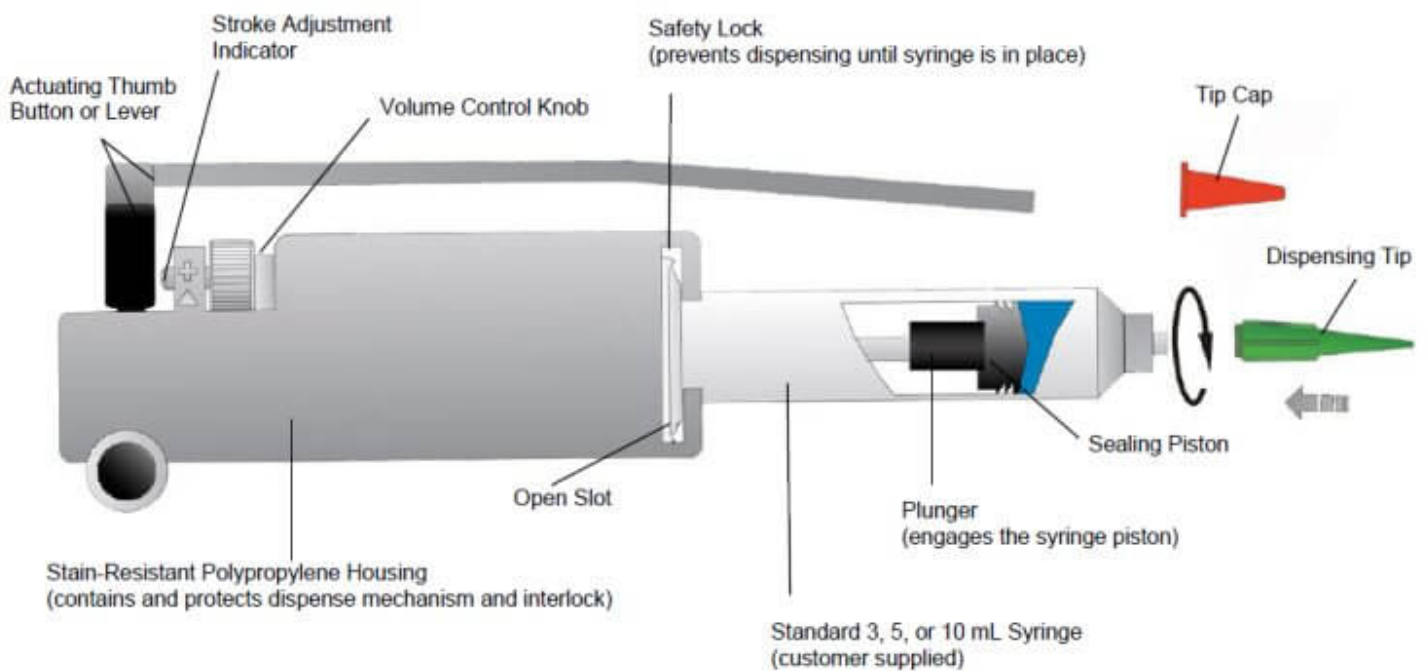

Micro-Dot Manual Positive Displacement Syringe Dispenser



Dispenser type	Manual, positive displacement syringe dispenser
Activation	By lever or thumb actuator
Shot size	Minimum: 0.0003ml (400cP material with 25 gauge taper tip) Maximum: 0.170ml (400cP material with 14 gauge taper tip)
Dimensions (LxWxH)	11.4cm x 2.2cm x 5.4cm
Weight	81g

Ordering Information

Part number	Description
DYMT20000	Micro-Dot Syringe Dispenser – thumb activated

Micro-Dot Manual Positive Displacement Syringe Dispenser



Part number	Description
DYMT20010	Micro-Dot Syringe Dispenser – lever activated
DYMT15466	Inclined Syringe Stand

Supplied by:

intertronics

INTERTRONICS

12a Station Field Industrial Estate, Banbury Road, Kidlington

Oxfordshire England OX5 1JD

t 01865 842842 e info@intertronics.co.uk

Last updated: September 2019 Version: 3.3

Statements, technical information and recommendations contained herein are based on tests we believe to be reliable but they are not to be construed in any manner as warranties expressed or implied. The user shall determine the suitability of the product for his intended use and the user assumes all risk and liability whatsoever in connection therewith.